RackConsole-PRO 17HR

Umbau der Energiekette

Im Auslieferungszustand ist die Energiekette in **S-Form** für Racktiefen von 600 bis 740 mm vormontiert.

WICHTIG: Möchten Sie die *RackConsole* in ein Rack mit einer Tiefe zwischen 570 und 599 mm einbauen, ist zuvor die Energiekette gemäß dieser Anleitung auf die **U-Form** umzubauen!

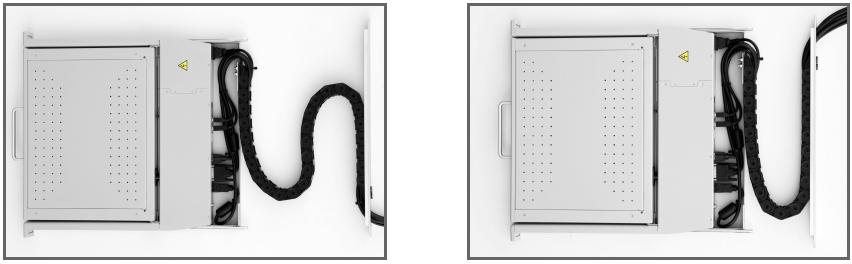

Ansicht der Kette in S-Form (links) sowie in U-Form (rechts)

Energiekette von Rückblende entfernen

1. Trennen Sie das Power-Kabel an der Kupplung und legen Sie es beiseite.
2. Entfernen Sie den Kabelbinder.

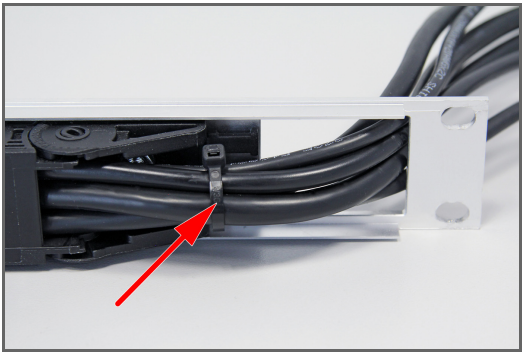

3. Ziehen Sie die Kabel soweit durch den Kabelauslass, dass Sie die Verschraubung der Energiekette an der Rückblende erreichen können.
4. Lösen Sie die Muttern und legen Sie diese und die Fächerscheiben beiseite.

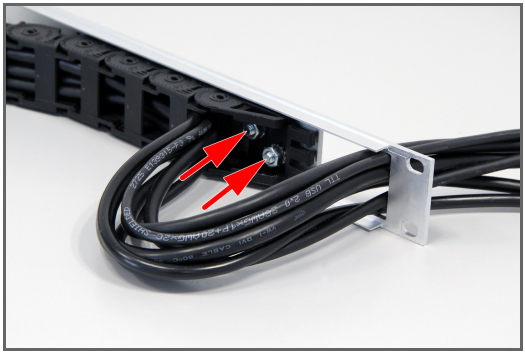

5. Ziehen Sie die Kabel vollständig durch den Kabelauslass und legen Sie die lose Rückblende beiseite.

Energiekette umbauen

1. Hebeln Sie alle Verschlüsse ab der grünen Markierung (direkt neben dem weiß markierten Kettenglied) bis zum Ende der Energiekette mit einem Schraubendreher auf.

> **WICHTIG:** Die Verschlüsse befinden sich an der *Unterseite* der Energiekette. Zur besseren Ansicht wurde die Energiekette für dieses Foto gedreht.

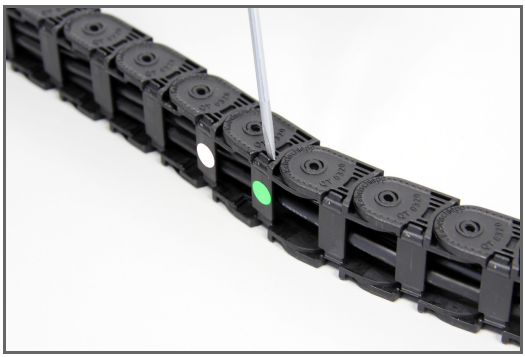

2. Lösen Sie das Endstück der Kette mit einem Schraubendreher und legen Sie es beiseite.

WICHTIG: Zur besseren Ansicht wurde die Energiekette für dieses Foto gedreht.

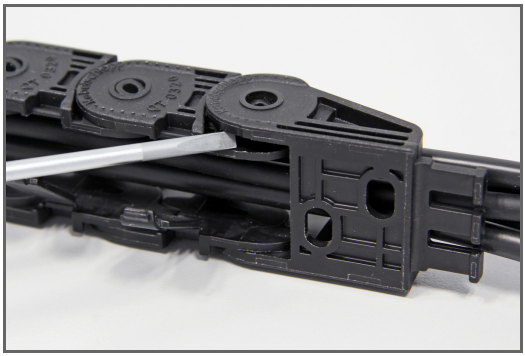

3. Entnehmen Sie die Kabel aus dem geöffneten Teilstück der Energiekette.

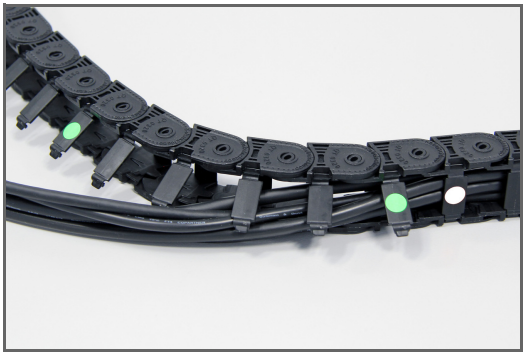

4. Lösen Sie die zwei grün markierten Kettenglieder der Energiekette mit einem Schraubendreher und trennen Sie die Kette an diesen Stellen.

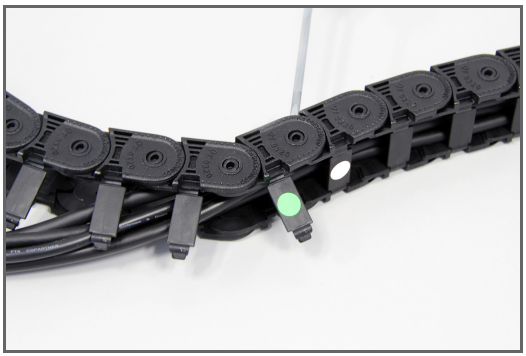

5. Legen Sie das entfernte Teilstück (6 Kettenglieder) beiseite.

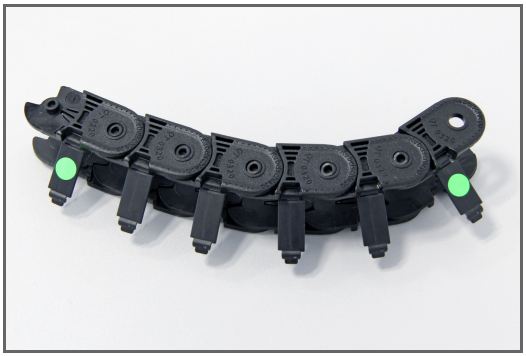

6. Drehen Sie das lose Kettenende um 180° und fügen Sie beide Teile der Energiekette fest zusammen.

WICHTIG: Zur besseren Ansicht wurde die Energiekette für dieses Foto gedreht.

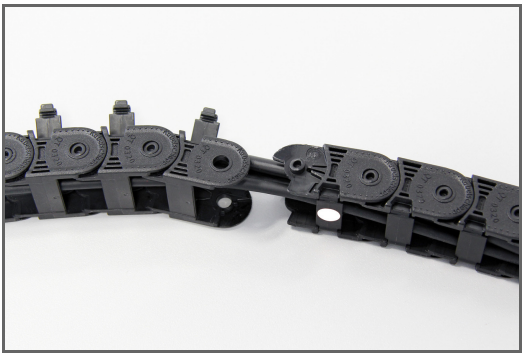

7. Legen Sie die Kabel sorgfältig in die Energiekette ein und schließen Sie die Verschlüsse.
8. Stecken Sie das Endstück der Kette wieder an und achten Sie auf die korrekte Kabelführung.

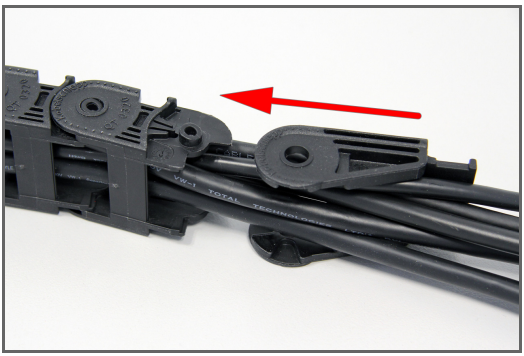

Energiekette an Rückblende befestigen

1. Führen Sie die Kabel durch den Kabelauslass der Rückblende.
2. Verbinden Sie das Power-Kabel mit der Kupplung.
3. Stecken Sie die Energiekette auf die Schrauben an der Rückblende. Verwenden Sie die Fächerscheiben und die Muttern zur Befestigung der Energiekette..

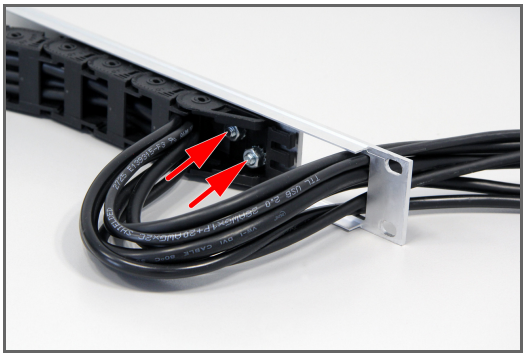

NOTIZEN

NOTIZEN

RackConsole-PRO 17HR

Converting the energy chain

When delivered, the energy chain is pre-assembled in **S shape** for rack depths from 600 to 740 mm.

IMPORTANT: If you want to install the *RackConsole* in a rack with a depth between 570 and 599 mm, first convert the energy chain to a **U shape** according to these instructions.

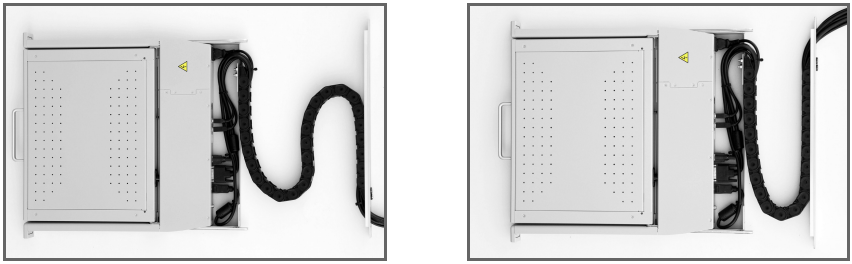

S-shaped (left) and U-shaped (right) view of the chain

Removing the energy chain from the rear panel

1. Disconnect the power cable at the coupling and put it aside.
2. Remove the cable tie.

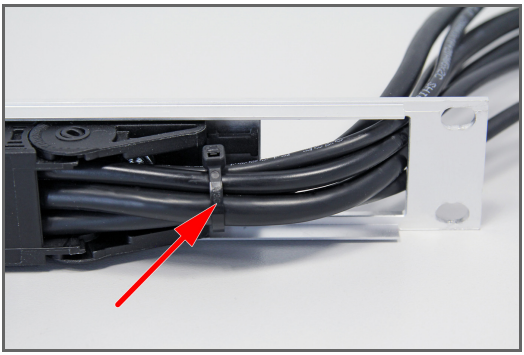

3. Pull the cables through the cable outlet until you can reach the screw connection of the energy chain at the rear panel.
4. Loosen the nuts and put them and the serrated washers aside.

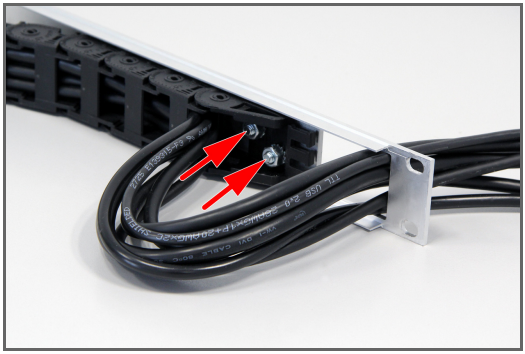

5. Pull the cables completely through the cable outlet and put the loose rear panel aside.

Converting the energy chain

1. Use a screwdriver to remove all closures from the green marking (directly next to the white marked chain link) to the end of the energy chain.

> **IMPORTANT:** The closures are located at the *bottom* of the energy chain.
> To give you a better view, the energy chain was turned for this photo.

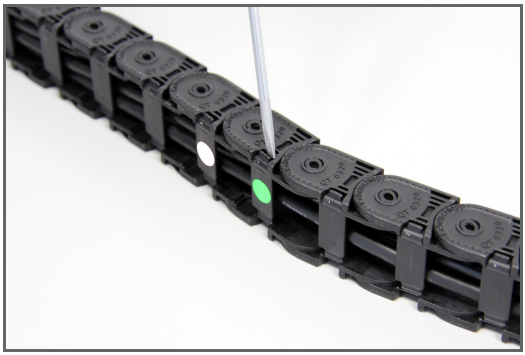

2. Loosen the end piece of the chain with a screwdriver and put it aside.

IMPORTANT: To give you a better view, the energy chain was turned for this photo.

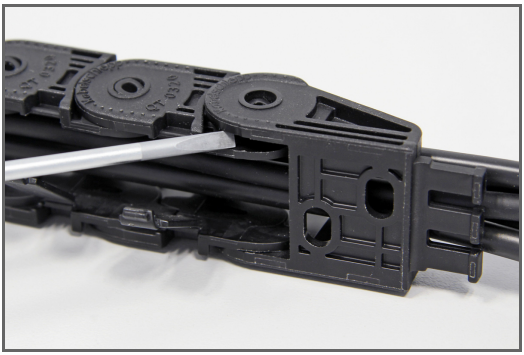

3. Remove the cables from the open part of the energy chain.

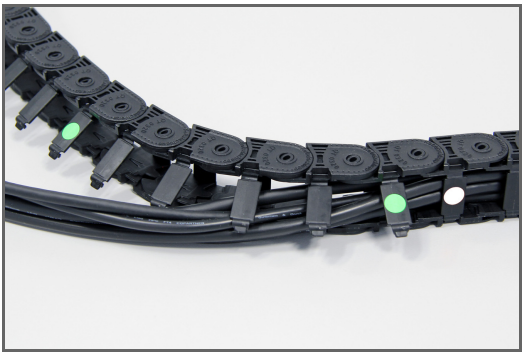

4. Loosen the two green marked chain links of the energy chain with a screwdriver and disconnect the chain at these positions.

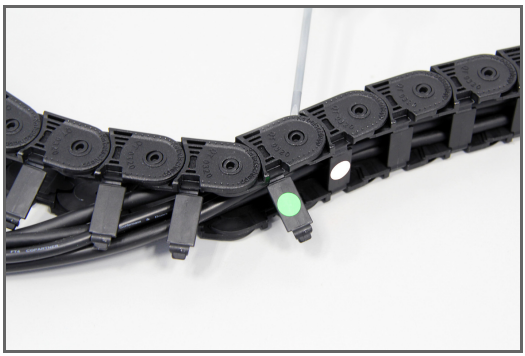

5. Put the piece you removed (6 chain links) aside.

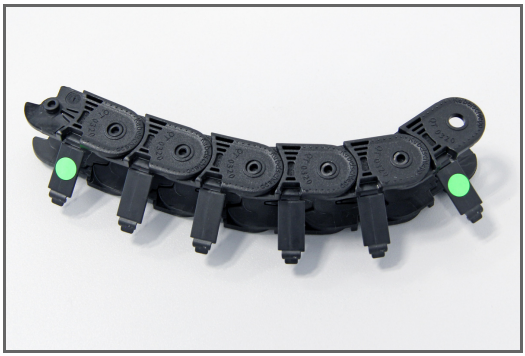

6. Turn the loose chain end by 180° and join both parts of the energy chain firmly together.

IMPORTANT: To give you a better view, the energy chain was turned for this photo.

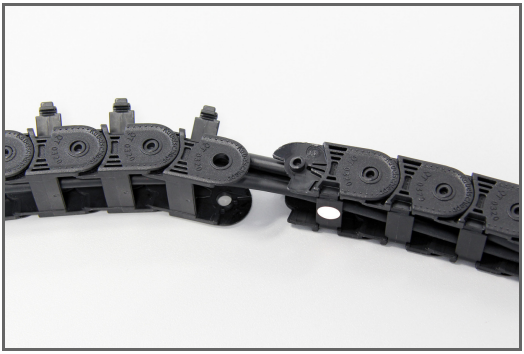

7. Carefully insert the cables into the energy chain and close the fasteners.
8. Re-attach the end piece of the chain and ensure that the cable is routed correctly.

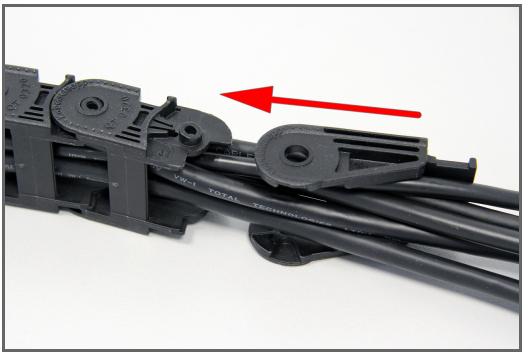

Fastening the energy chain to the rear panel

1. Route the cables through the cable outlet of the rear panel.
2. Connect the power cable to the coupling.
3. Place the energy chain on the screws on the rear panel. Use the serrated lock washers and the nuts to fasten the energy chain.

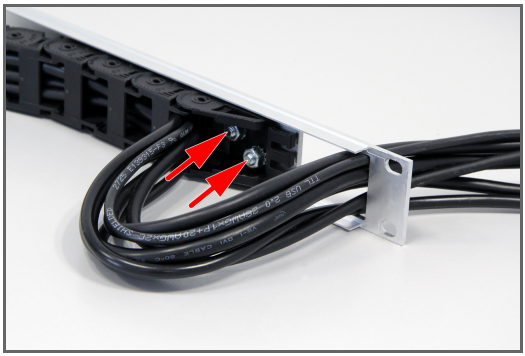

NOTES

NOTES